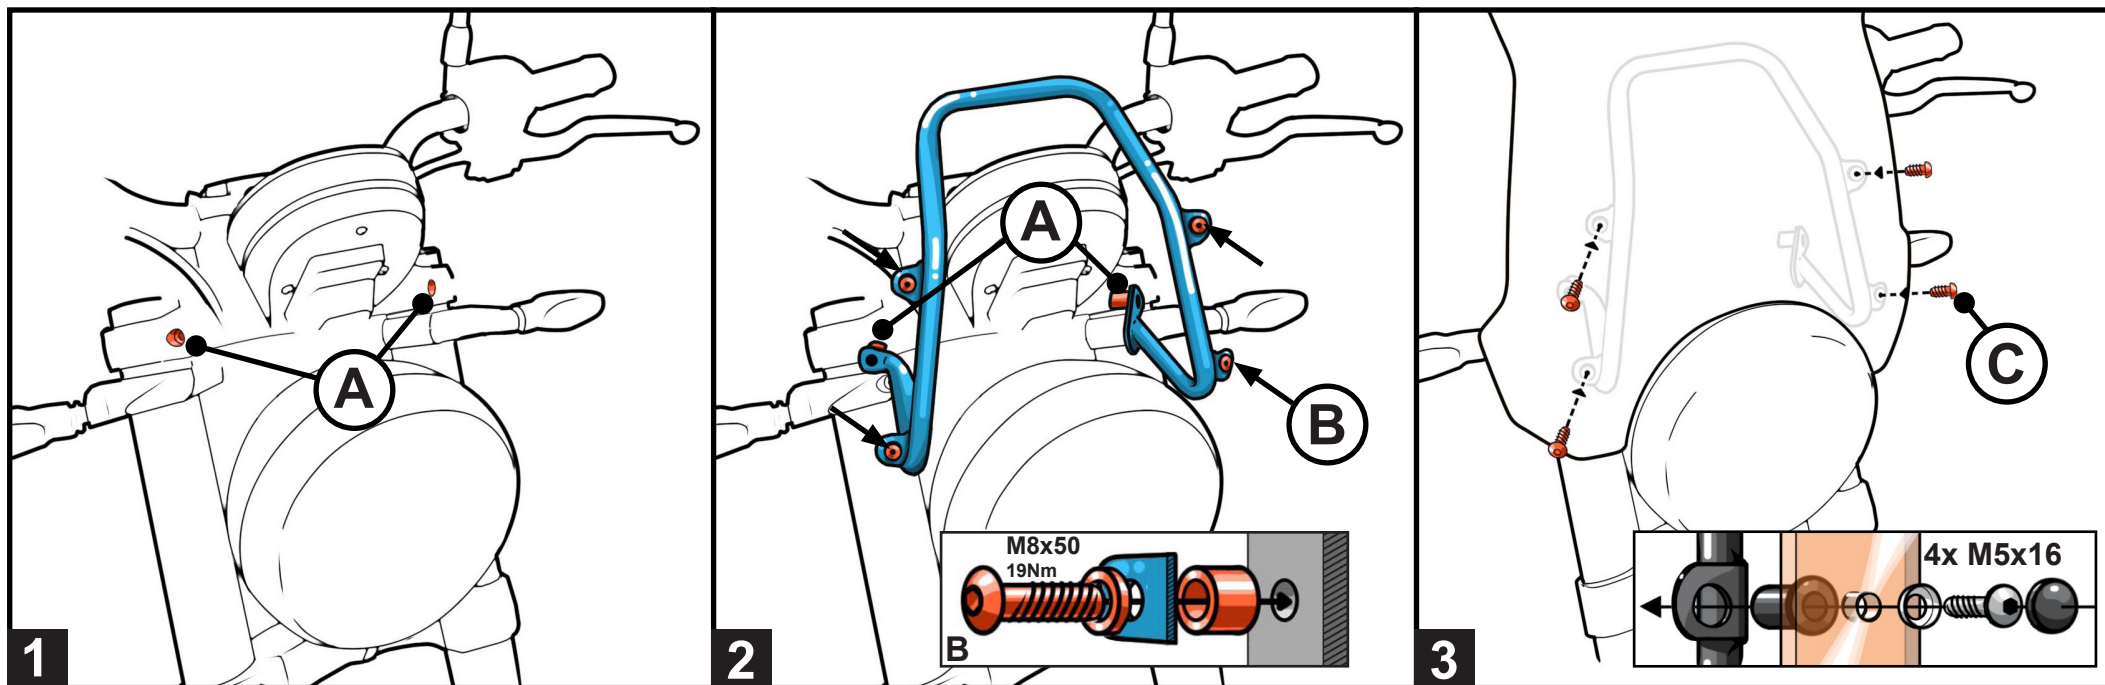


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.

EN Remove the screws in **A** from the upper clamp.

Position the bracket and secure it with bushings and M8x50 screws with washers supplied in the kit (as shown in the detail). Then insert the four wellnuts **B** in the indicated holes.

Now position the windshield and secure it using the screws **C**, using plastic washers and caps, as shown in detail, in fig. 3.

IT Rimuovere le viti **A** dalla piastra superiore.

Posizionare il telaio, e fissarlo con le bocche e le viti M8x50 con la rondella fornite nel kit. Poi inserire i quattro wellnuts **B** nei fori indicati.

Infine posizionare il cupolino e fissarlo con le viti **C**, utilizzando la rondella e il tappo in plastica come mostrato nel dettaglio di fig. 3.